



Ya Suh Dar
Ceiling Fan
Manual




Ceiling Fan

Model	Voltage	R.P.M	Power Consumption (Maximum)
Y16-AC Y15-AC Y14-AC	110V 60Hz	High	45~43 W
		Medium	40~31 W
		Low	36~24 W
Y16-DC Y15-DC Y14-DC	110V 220V 50/60Hz	High	25~22 W
		Medium	15~12 W
		Low	10~8 W
Y16-AC-2 Y15-AC-2 Y14-AC-2	220V 50/60Hz	High	45 W
		Medium	35 W
		Low	25 w

※SIZE : 602x602x190mm WEIGHT : 5.2-5.4kg

Notice of Installing

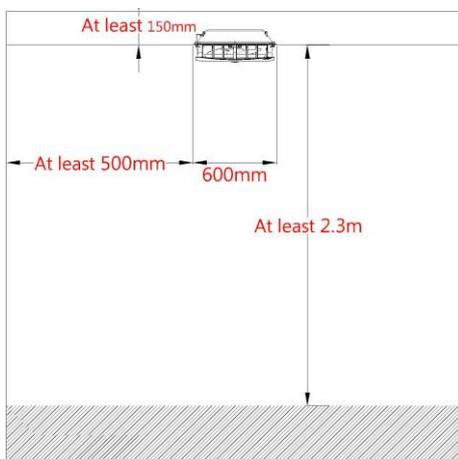


1. The installing diagram is at the left hand side.
2. Please make sure the size of ceiling tile is 600 x 600 mm.
3. Let the person who has technical qualification do the installing.
4. Please use the switch with security certificate.
5. Please double check the voltage before installing.
6. If installing several ceiling fans, there are at least 4 ceiling tiles between two ceiling fans.
7. Make sure the ceiling tile can sustain 20 kg before installing.

Standard Equipment

1. Ceiling fan × 1 unit
2. Remote control with batteries × 1 set

Installation Guide

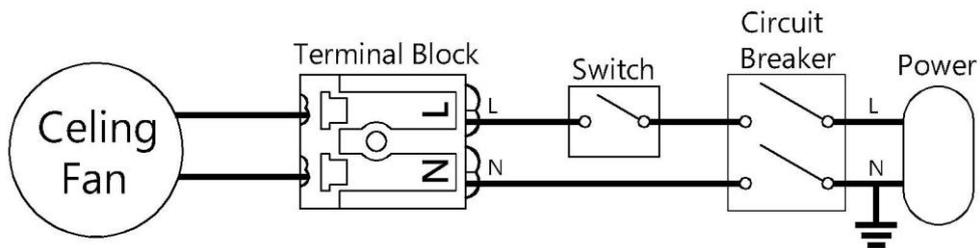

★Please use the wire is 1.6mm-2.0mm

1. Remove the ceiling tile



2. Put the ceiling fan to the ceiling



3. Let the ceiling fan still horizontal with ceiling.

4. Connect with the wire

Please turn off /disconnect the power before installing!



Notice of operating

1. Please do not block the blades or the turntable when the ceiling fan is operating.
2. Please do not use any spray on the ceiling fan.
3. The limitation of environment
 - A. The voltage have to within the certain range: $110V \pm 10\% / 220V \pm 10\%$
 - B. Temperature of environment : $0 \sim 45^{\circ}\text{C}$
 - C. Humidity of environment $\leq 80\%$
3. This product cannot use at the environment with a lot of dust and soot.
4. Please do not refit by yourself or replace any parts which are not from the manufacturer.
5. Please do the maintenance periodically.

Manual of remote control



- There are 4 speeds modes (high, medium, low and natural wind).
- There is the switch of turntable. Turn it on for cycling or set it in a certain direction.
- The battery of remote control is No.4 battery. (1.5Vx2)
- Please remove the batteries if you don't use the remote control.
- Please do the recycling for

discarding batteries.

Dismantling and Maintenance

1. **Please turn off /disconnect the power before dismantling and do the maintenance.**


2. Take apart the housing

(The housing of Y14-Fan series are different, but the way of dismantling is the same)



Take out the screws at the corners of housing (4 Pcs)

Take out the housing

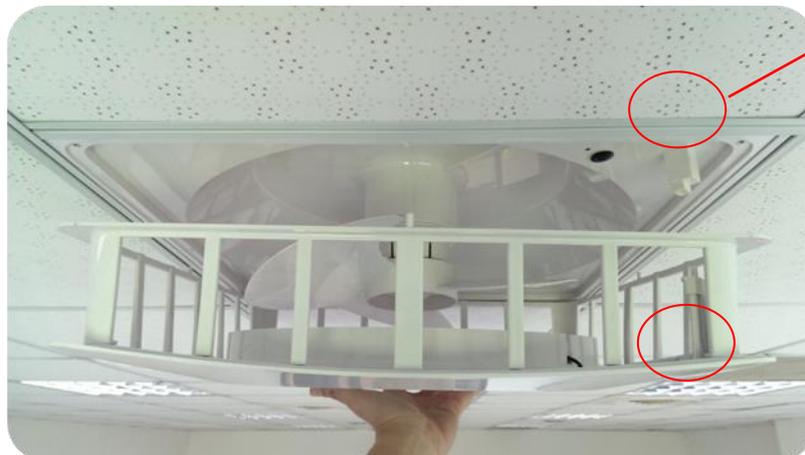


Please notice the relative position when assembling



3. Dismantle the blades

Loose the center clockwise and take out the blades

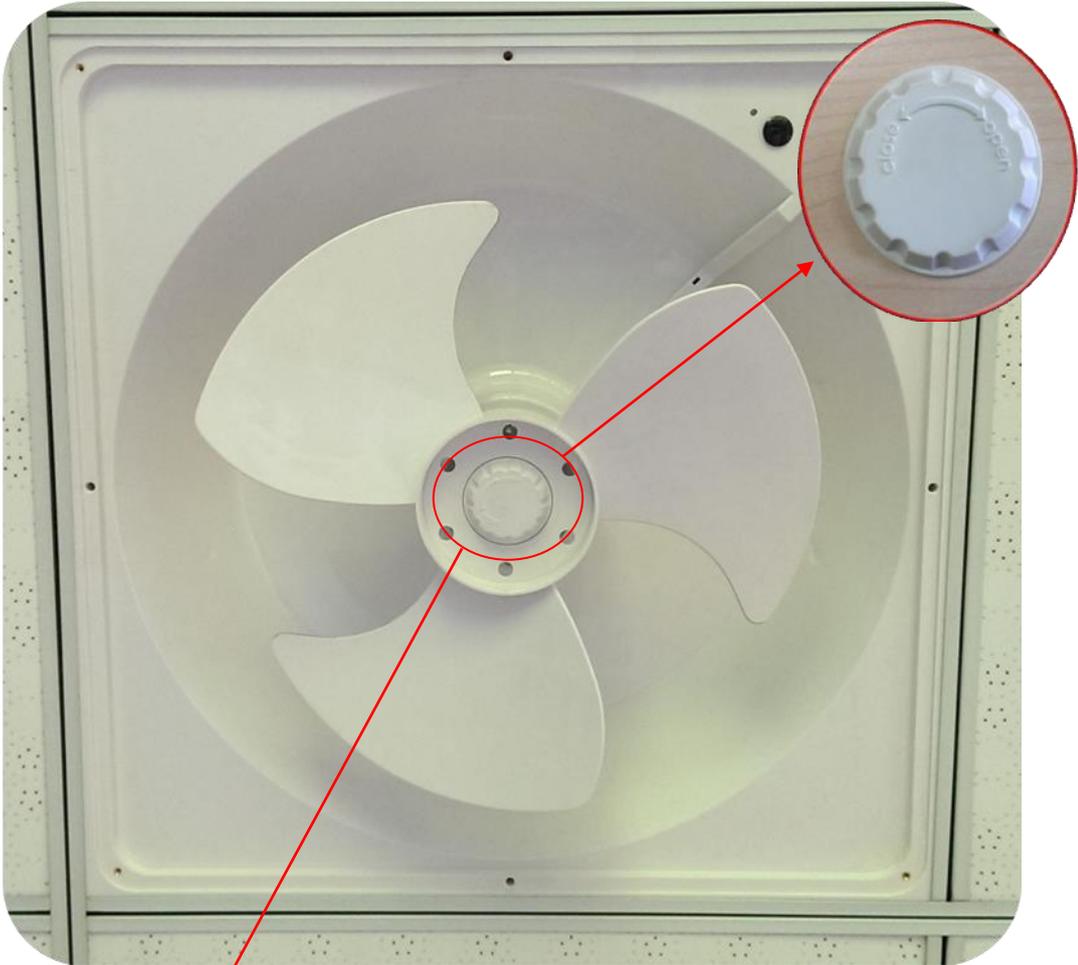

When do the installation, the blades have to install properly on the axis.

- Do not wash the base of ceiling fan by water. The blades and the center are washable, but they have to be dry before assembling.

4. Dismantle the turntable

Loose the cover of turntable anticlockwise and take out the turntable



When do the installation, the turntable have to install on the fixed mount.

- Please do not wash the housing by water. The turntable and the

cover of the turntable are washable, but they have to be dry before assembling.

Simple Troubleshooting

Remote control is not operating	The batteries are out of power or loosened	Check the batteries
Fan is not operating	The power is off	Check the power
Turntable is not operating	Did not assemble properly	Please follow the instruction of manual and do the reassembling
Strange noises	Installed unevenly	Do the installation again
	There are foreign objects in the ceiling fan	Check the inner of ceiling fan

Ya Suh Dar Co.,Ltd

Head Office

No.332,Lane 549,Sec.2,Sanfang Road, Fengyuan Dist.,
Taichung, Taiwan 42073

☎ 04-25278062

📄 04-25293889

✉ yasuda.fan@msa.hinet.net

